

XENON PRO

HND148228



You should read this user manual carefully before using the appliance.






Keep these instructions with the appliance.



Use outdoors only.



- Only use this appliance outdoors or in a well ventilated area.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

 HENDI				 0063/XX ¹
Innovatielaan 6, 6745 XW De Klomp, The Netherlands www.hendi.eu				
Item / Article / Item / Artıkul / Article / Artículo / Artículo / предмет / Etiqueta / Číslo artiklu / Číslo artikla / Tétel / Stavka	HND148228 Xenon pro	PIN : 0063AU3702		
Country / Land / Land / Kraj / Pays / Paese / país / страна / Kiado / Země / Krajina / Ország / Država	NL/DE/AT/PL/CH	BE/FR/LU/GB/IE/GR/IT	AT/CH	
Power / Belasting / Leistung / Moc nominálna / Potenza / Potere / Мощност / Iovic / Vrijem / Vrijem / Aramellátás / Szaga	[HS] 7,5 kW	[HS] 6,5 kW	[HS] 7,5 kW	18/0 STAINLESS STEEL
Category / Categoría / Kategorie / Kategorija / Categoría / Categoría / Kategorie / Kategorija / Kategorija / Kategorija	I3P	I3P	I3B/P	
Consumption / Verbrauch / Verbruik / Zuzycie / Consumption / Consumo / Consommation / Потребление / Készlet / Spottéba / Spottéba / Fogasztás / Potrošina	515 g/h	448 g/h	501 g/h	
Set up / Aafleging / Inrichting / Przeznaczony na / Concu post / Configurare / Configurarea / Настройка / Pribyon / Hodnota regulátoru / Italku / Hódnota regulátoru italku / Beüzemelés / Postavljajce	G31-50 mbar	G31-37 mbar	G30-50mbar	
Serial no. / Serien nr. / Serie nr. / Nr. serijny / N°de série / N° serie / Numár serial / Серийный номер / Αριθμός σειράς / Pořadové číslo / Poradové číslo / Sorozatszám / Serijški br. :				



Dear Customer,

Thank you for purchasing this HENDI appliance. Please read these user instructions carefully before connecting the appliance in order to prevent damage due to incorrect use. Read the safety instructions in particular very carefully.

Safety Regulations


- Only use this appliance outdoors.
- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose it was intended and designed for. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired, if necessary, by a certified repair company.
- Do not try to repair the appliance yourself. This could give rise to life-threatening situations.
- Always keep an eye on the appliance when in use.
- Children do not understand that incorrect use of appliances can be dangerous. Therefore, never let children use appliances without supervision.
- Do not use any extra devices that are not supplied along with the appliance.
- The use of the installation must comply with the applicable national and local regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is intended solely for preparing food.
- Gas and electrical installations should be checked at least once a year.
- Note: the griddle is hot. Let it cool down before touching or removing it.
- We recommend to use only gas cylinders with a capacity of more than 10 kilograms.
- Perform gas cylinder replacement away from potential ignition sources.
- Always place the gas cylinder adjacent to the appliance, not underneath it.
- If a gas leak is detected immediately close the gas valve.
- Note that parts of the barbecue can become very hot. Wear protective clothing (gloves) if you must touch them anyway.

Special safety instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.



- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - Building Regulations
 - DO NOT immerse the appliance in water.
 - DO NOT leave the appliance unattended during operation.
 - Some surfaces become hot with use - exercise caution when using the appliance.
 - Keep this appliance away from children when in use.
 - DO NOT move the appliance during cooking.
 - DO NOT use if the hose is damaged in any way.
 - DO NOT operate the appliance without the cooking grids in place.
 - ALWAYS switch off the gas supply to the appliance when not in use.
 - ALWAYS store gas bottle upright, even when empty.
 - DO NOT use or store gas bottles in direct sunlight.
 - DO NOT use if the ambient temperature exceeds 40°C.
 - Regularly inspect the hose for any flaws/defects.
 - Not suitable for indoor use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance is not suitable for use by children.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- **Warning: assembly of the tubing must be conducted by some qualified tuber of destination countries.**
- Approved gas regulator is used according to appliances categories and countries listed in data plate. Approved flexible hose would be changed when the national conditions require it & consult the local regulations, these may differ.
- The tubing or the flexible hose must be changed within the prescribed intervals or with-in one year. The flexible hose should not extend than 1.5m according to standard EN16436:2014.

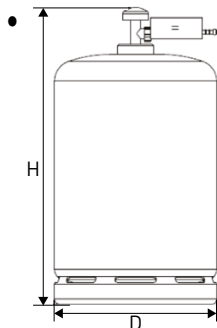

The maximum cylinder dimensions(regulator included) should not exceed (D)50x(H)75cm if no cylinder compartment included.



Intended use

- The device is intended for professional use and can be operated only by qualified personnel.
- This appliance is designed only for grilling appropriate food products. Any other use may lead to damage to the appliance or personal injury.


Connecting the gas bottle

- 1 = main tap
- 2 = pressure regulator
- 3 = gas hose
- 4 = gas bottle
- 5 = rubber washer

Attach the pressure regulator to the gas bottle using the large brass nut. Always ensure that the rubber sealing washer is present in the nut. (NB. This rubber washer is not required for UK-type pressure regulators). Tighten the nut well. Note that the nut has a left-hand thread.

Check the connections for leaks using a soap and water solution.

- Operating the appliance for any other purpose shall be deemed a misuse of the device. The user shall be solely liable for improper use of the device.

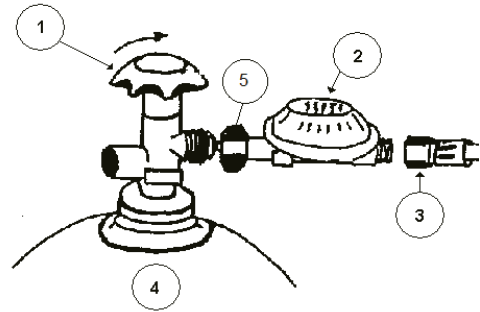

Every time a newly filled gas bottle is connected, a new rubber washer must be fitted. In most cases, your gas supplier will include it with the bottle.

Igniting the gas barbecue

- Always place the grids on the Powergrill.
- Turn the knob to "normal" position, keep it pressed-in. Press the red ignition knob in a few times till all the burners ignite fully. Keep the

knob pressed-in for approximately 10 seconds, the flames will now stay burning.

- Check through the looking hole if the burner burns completely.

Extinguishing the gas barbecue

- Turn the knob completely to the right. **Note! After turning off the burner, wait approximately 10 minutes before reigniting the burner. After turning off the burner, always turn off the main tap on the gas cylinder and the tap on the appliance!**

Cleaning and maintenance

- The Powergrill has a self cleaning working. Therefore you have to let the burner burn at it's full power for approximately 10 minutes. Fat and remains will then be vaporised or burned.
- Beware: Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water with mild detergent).
- The grid and/or baking tray should be cleaned reg-

ularly. Use a special barbecue cleaner and follow the instructions on its packaging.

- Clean the ventilation slots (if applicable) with a vacuum cleaner.
- Keep inside after use.
- Let specialised personnel clean the burner at least once a year.
- Never use a high pressure cleaner.



Faults

Fault	Possible cause	Fault	Possible cause
burner fails to ignite at all:	defective ignition	burner does not ignite completely:	gas cylinder (almost) empty
	defective thermocouple		kink in gas hose
	dirty spark plug		gas cylinder valve not entirely open
	defective pressure regulator		clogged jet
	empty gas cylinder		defective valve
	kink in gas hose		
	clogged jet		

If in doubt, please contact your supplier.

Note

- It is to be recommended to replace the gas hose after 3 or 4 years (see date shown on hose). The gas hose becomes porous after a time.
- Consult the local regulations, these may differ.
- Always store gas bottles upright, even when empty.
- The Powergrill is supplied for use with propane gas. It is not allowed to modify this appliance, if this is desired please contact the manufacturer.

Assembling the undercarriage

The following parts have been supplied for the assembling of the under-carriage:

- 1 wheel frame
- 1 body frame
- 2 bolts M6x40.

- 2 bolts M6x65.
- 4 Cap nuts M6.
- 2 rings M6.
- 1 star bolt M6

Assembly

- Remove all protective plastic foil
- Fasten the frame with the already assembled wheels to the under part of the Power grill. Use

the parts delivered; M6x40 bolts and the M6 cap nuts. Take note of the frame stand, the bend in this frame has to be slightly bent upwards at the ends.



- Assemble the body frame the wheel frame. Take note, the supplied rings has to be positioned in the inner side of the frame and also where the

two frames join together. Use the long M6 x 65 bolts and the M6 cap nuts.



- Fasten the U-shaped part to the under part of the body frame. Use the star bolt supplied. Check if it's really tightened.





- Put the barbecue in up right position. The barbecue has to be positioned horizontally. If not the wheel frame has to be turned the other way round.

Warranty

Any defect affecting the functionality of the appliance which becomes apparent within one year after purchase will be repaired by free repair or replacement provided the appliance has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If the appliance is claimed under warranty, state where and

when it was purchased and include proof of purchase (e.g. receipt).

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

Discarding & Environment

When decommissioning the appliance, the product must not be disposed of with other household waste. Instead, it is your responsibility to dispose to your waste equipment by handing it over to a designated collection point. Failure to follow this rule may be penalized in accordance with applicable regulations on waste disposal. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural re-

sources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local waste collection company. The manufacturers and importers do not take responsibility for recycling, treatment and ecological disposal, either directly or through a public system.





Tools for Chefs

Manufacturer: Hendi B.V.

Innovatielaan 6

6745 XW De Klomp, The Netherlands

Tel: +31 317 681 040

Email: info@hendi.eu

Hendi HK Ltd.

1208, 12/F, Exchange Tower

33 Wang Chiu Road, Kowloon Bay, Hong Kong

Tel: +852 2154 2618

Email: info-hk@hendi.eu

Importer: Neville UK PLC

Unit 6, Viking Way, Erith, Kent.

DA8 1EW, England

<https://www.nevilleuk.com/>

Find Hendi on internet:

www.hendi.eu

www.facebook.com/HendiToolsforChefs

www.linkedin.com/company/hendi-food-service-equipment-b.v.

www.youtube.com/HendiEquipment

- Changes, printing and typesetting errors reserved.